

Enduro Plus CDMA

Multi-purpose Tracking Device

USER MANUAL



Document Title	Enduro Plus CDMA User manual	
Version	1.01	
Date	2015-07-01	
Status	Release	
Document Control ID	TTW-EnduroPlusCDMA-UM001	

General Notes

TrackingTheWorld offers this information as a service to its customers, to support application and engineering efforts that use the products designed by TrackingTheWorld. The information provided is based upon requirements specifically provided to TrackingTheWorld by the customers. TrackingTheWorld has not undertaken any independent search for additional relevant information, including any information that may be in the customer's possession. Furthermore, system validation of this product designed by TrackingTheWorld within a larger electronic system remains the responsibility of the customer or the customer's system integrator. All specifications supplied herein are subject to change.

Copyright

This document contains proprietary technical information which is the property of TrackingTheWorld, copying of this document and giving it to others and the using or communication of the contents thereof, are forbidden without express authority. Offenders are liable to the payment of damages. All rights reserved in the event of grant of a patent or the registration of a utility model or design. All specification supplied herein are subject to change without notice at any time.

Copyright © TrackingTheWorld 2016

For More Information: Please contact TrackingTheWorld, 1633 Bayshore Highway, Suite 390, Burlingame, CA. 94010, USA Phone: +1.650.692.8100 – Email: info@trackingtheworld.com – Website: www.trackingtheworld.com

Copyright © TrackingTheWorld. All rights reserved. Information in this publication supersedes that in all previously published material. Specification and price change privileges reserved. All trade names referenced are the service marks, trademarks, or registered trademarks of their respective companies.

TTW-EnduroPlusCDMA-UM001 - 2 -

Contents

C	ontents		3
0.	. Revision his	story	4
1.	. Introductio	on	5
2.	. Product Ov	verviewverview	6
	2.1. Appear	rance	6
	2.2. Button	ns/Mini USB Interface Description	6
	2.3. LEDs D	escription	7
	2.4. Extern	al Power Interface	7
	2.4.1.	2.4.1 External DC Charger Interface	7
	2.4.2.	2.4.2 External Battery Interface	8
	2.5. Ignition	n Detection	8
	2.6. Extern	al Input Interface	9
3.	. Getting Sta	arted	10
	3.1. Parts L	ist	10
	3.2. Battery	y Charging	10
	3.3. ENDUF	RO PLUS CDMA External Cable Interface	11
	3.4. Turn o	n/Turn off	11
4.	. Troublesho	ooting and Safety info	12
	4.1. Troubl	eshooting	12
	4.2. Safety	info	12

For More Information: Please contact TrackingTheWorld, 1633 Bayshore Highway, Suite 390, Burlingame, CA. 94010, USA Phone: +1.650.692.8100 – Email: info@trackingtheworld.com – Website: www.trackingtheworld.com – Website:

Copyright © TrackingTheWorld. All rights reserved. Information in this publication supersedes that in all previously published material. Specification and price change privileges reserved. All trade names referenced are the service marks, trademarks, or registered trademarks of their respective companies.

0. Revision history

Revision	Date	Author	Description of change
1.00	2015/1/30	Abside Yu	Initial
1.01	2015/7/01	Abside Yu	Change Data cable M to MiniUSB cable

For More Information: Please contact TrackingTheWorld, 1633 Bayshore Highway, Suite 390, Burlingame, CA. 94010, USA Phone: +1.650.692.8100 – Email: info@trackingtheworld.com – Website: www.trackingtheworld.com – Website:

Copyright © TrackingTheWorld. All rights reserved. Information in this publication supersedes that in all previously published material. Specification and price change privileges reserved. All trade names referenced are the service marks, trademarks, or registered trademarks of their respective companies.

TTW-EnduroPlusCDMA-UM001 - 4 -

1. Introduction

The water resistant ENDURO PLUS CDMA is a powerful GPS/GNSS locator designed for lone worker, vehicle, pet and asset tracking applications. The thumb sized button makes this device ideal for applications requiring rapid notification of emergency alert or regular setting of geo-fences based on current location. Its built-in GNSS receiver has superior sensitivity and fast time to first fix. Its CDMA2000-1X allows the ENDURO PLUS CDMA's location to be monitored in real time or periodically tracked by a backend server and mobile devices. Its built-in 3-axis accelerometer allows motion detection and extends battery life through sophisticated power management algorithms. System integration is straightforward as complete documentation is provided for the full featured @Track protocol. The @Track protocol supports a wide variety of reports including emergency, geo-fence boundary crossings, low battery and scheduled GPS/GNSS position.


For More Information: Please contact TrackingTheWorld, 1633 Bayshore Highway, Suite 390, Burlingame, CA. 94010, USA Phone: +1.650.692.8100 – Email: info@trackingtheworld.com – Website: www.trackingtheworld.com – Website:

Copyright © TrackingTheWorld. All rights reserved. Information in this publication supersedes that in all previously published material. Specification and price change privileges reserved. All trade names referenced are the service marks, trademarks, or registered trademarks of their respective companies.

TTW-EnduroPlusCDMA-UM001 -5-

2. Product Overview

2.1. Appearance

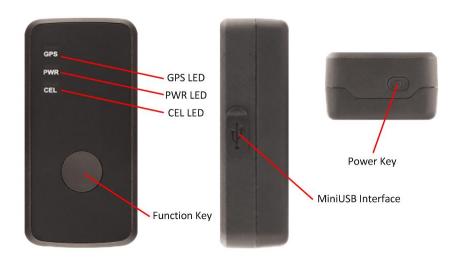

2.2. Buttons/Mini USB Interface Description

Button /Mini USB Interface Description		
Power Key	Turn on ENDURO PLUS CDMA	
	Turn off ENDURO PLUS CDMA when without charging. (If	
	power key is enabled)	
Function Key	Geo-Fence mode	
	Long press the key to enable/disable Geo-Fence IDO	
	Geo-Fence in current position mode	
	Long press the key to enable/disable Geo-Fence IDO. If	
	enable Geo-Fence IDO, using the current position as the	
	center of Geo-Fence 0.	
	SOS mode (default)	
	Long press the key to active SOS alarm	
Mini USB interface	Connect a 5V DC adapter can power ENDURO PLUS CDMA	
	and charge the internal battery	
	• Connect a 3.7V Li-ion or Li-Polymer battery can power	
	ENDURO PLUS CDMA	
	Backend server developer or administrator can use the	
	MiniUSB cable to configure ENDURO PLUS CDMA	

For More Information: Please contact TrackingTheWorld, 1633 Bayshore Highway, Suite 390, Burlingame, CA. 94010, USA Phone: +1.650.692.8100 – Email: info@trackingtheworld.com – Website: www.trackingtheworld.com

Copyright © TrackingTheWorld. All rights reserved. Information in this publication supersedes that in all previously published material. Specification and price change privileges reserved. All trade names referenced are the service marks, trademarks, or registered trademarks of their respective companies.

TTW-EnduroPlusCDMA-UM001 - 6 -

2.3. LEDs Description


There are three LED in ENDURO PLUS CDMA, the description as following.

LED	Event	State
CELL LED	Searching network	Fast flash
	Network has been registered	Slow flash
	Power off	Dark
	<led on=""> is 2</led>	Dark
GPS LED	GPS has fixed	Solid
	GPS is in fixing	Fast flash
	GPS is on and GPS data wrong	Slow flash
	GPS is off	Dark
	If < LED on > is 0, 150 seconds later after powers on.	Dark
	<led on=""> is 2</led>	Dark
PWR LED	Power on and normal	Dark
	Charger inserted and charging completed	Solid
	Charger inserted and charging	Fast flash
	Power key was pressed and prepare to power off	Fast flash
	Abnormal	Fast flash
	Power low alert	Slow flash
	Power off or turn off the power light by command	Dark
	<led on=""> is 2</led>	Dark

2.4. External Power Interface

2.4.1. 2.4.1 External DC Charger Interface

The Pin2 on Mini-USB connector are used for charging and named as VCHG pin, It can be connected to a 5V DC power supply to power ENDURO PLUS CDMA and charge the internal battery.

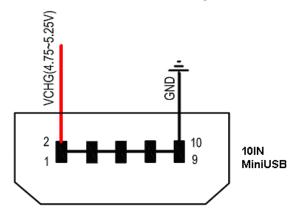


For More Information: Please contact TrackingTheWorld, 1633 Bayshore Highway, Suite 390, Burlingame, CA. 94010, USA Phone: +1.650.692.8100 – Email: info@trackingtheworld.com – Website: www.trackingtheworld.com

Copyright © TrackingTheWorld. All rights reserved. Information in this publication supersedes that in all previously published material. Specification and price change privileges reserved. All trade names referenced are the service marks, trademarks, or registered trademarks of their respective companies.

TTW-EnduroPlusCDMA-UM001 -7-


2.4.2. 2.4.2 External Battery Interface

The Pin 8 on Mini-USB connector is for external battery and named as EXTBAT pin, It can be connected to 3.7V Li-ion or Li-Polymer battery to power ENDURO PLUS CDMA.

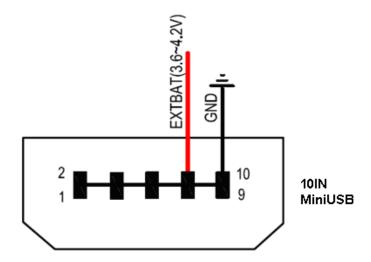

2.5. Ignition Detection

The Pin 7 on Mini-USB connector is for ignition detection when ENDURO PLUS CDMA is used in vehicle tracking application, It is named as IGN_IND pin.

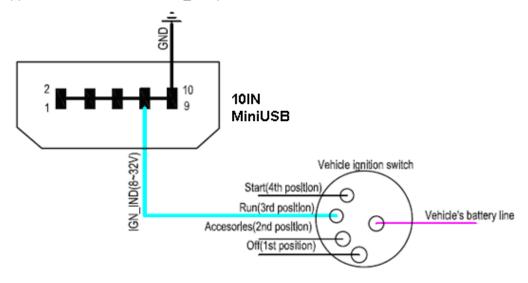

Another easy way is to connect PIN7 to a power output in the fuse box of the vehicle which is only enabled after the vehicle is ignition on. For example: the power output for radio FM.

For More Information: Please contact TrackingTheWorld, 1633 Bayshore Highway, Suite 390, Burlingame, CA. 94010, USA Phone: +1.650.692.8100 – Email: info@trackingtheworld.com – Website: www.trackingtheworld.com

Copyright © TrackingTheWorld. All rights reserved. Information in this publication supersedes that in all previously published material. Specification and price change privileges reserved. All trade names referenced are the service marks, trademarks, or registered trademarks of their respective companies.

TTW-EnduroPlusCDMA-UM001 -8 -


2.6. External Input Interface

The Pin 5 on Mini-USB connector is a negative trigger input in newer hardware version, It is named as NSW pin.

For negative trigger input the electrical conditions are:

Logical State	Electrical State
Active	0V to 0.8V
Inactive	1.7V to 32V or Open

An input example is shown as following figures:

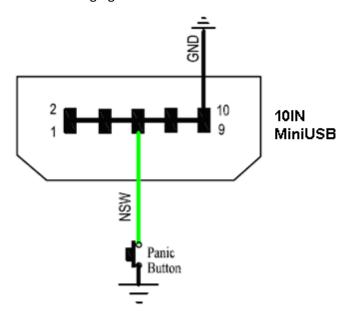

Example of NSW pin connect to a panic button

For More Information: Please contact TrackingTheWorld, 1633 Bayshore Highway, Suite 390, Burlingame, CA. 94010, USA Phone: +1.650.692.8100 – Email: info@trackingtheworld.com – Website: www.trackingtheworld.com

Copyright © TrackingTheWorld. All rights reserved. Information in this publication supersedes that in all previously published material. Specification and price change privileges reserved. All trade names referenced are the service marks, trademarks, or registered trademarks of their respective companies.

TTW-EnduroPlusCDMA-UM001 - 9 -

3. Getting Started

3.1. Parts List

Name	Picture	Remark
ENDURO PLUS CDMA Locater	GIFE FINE CIEL	The CDMA-1X/GPS locator.
AC-DC Power Adapter (Standard accessory)		It is used to charge the internal battery of ENDURO PLUS CDMA.
ENDURO PLUS CDMA MiniUSB Data Cable (Optional accessory)		It is the MiniUSB Data Cable which can be used for firmware upgrading and configuration.
ENDURO PLUS CDMA External Cable (Optional accessory)		It is the extend cable which include the charger interface and external battery interface on ENDURO PLUS CDMA. It also includes theignition detection interface on the ENDURO PLUS CDMA.

3.2. Battery Charging

- Please connect AC-DC power adapter with ENDURO PLUS CDMA.
- Insert the AC-DC power adapter into the power socket.
- During charging, the PWR LED is flashing fast. When the battery is full charged, the PWR LED will be Ever-light.
- You can also charge the battery by USB cable which connects ENDURO PLUS CDMA with the PC.
- Charging time is about 5 hours.

Note: Before the first time using ENDURO PLUS CDMA, please full charge the battery.


For More Information: Please contact TrackingTheWorld, 1633 Bayshore Highway, Suite 390, Burlingame, CA. 94010, USA Phone: +1.650.692.8100 – Email: info@trackingtheworld.com – Website: www.trackingtheworld.com

Copyright © TrackingTheWorld. All rights reserved. Information in this publication supersedes that in all previously published material. Specification and price change privileges reserved. All trade names referenced are the service marks, trademarks, or registered trademarks of their respective companies.

TTW-EnduroPlusCDMA-UM001 - 10 -

3.3. ENDURO PLUS CDMA External Cable Interface

ENDURO PLUS CDMA External Cable is a cable with a Mini USB connector and six wires which include the external power interface, ignition detect and input interface for ENDURO PLUS CDMA. Please find the detail description in following table.

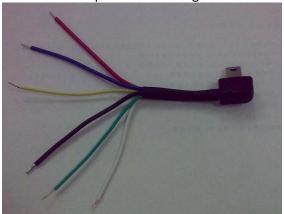

Color	Name	Remark
RED	External DC IN (5V)	Please refer to 2.4.1 for detail
Black	Ground	Please refer to 2.4.1 for detail
Blue	External Battery IN (DC 3.4V to 4.2V)	Please refer to 2.4.2 for detail
White	Ignition Detect	Please refer to 2.5for detail
Green	NSW (negative trigger input)	Please refer to 2.6 for detail

3.4. Turn on/Turn off

- Turn on:
- ◆ Method 1: Press the Power key at least 3 seconds and release it to turn on ENDURO PLUS CDMA. At the same time, PWR LED will light on.
- Method 2: Connect device to charger or external battery, and it will turn on automatically, PWR LED will light on.
- Turn off:
- Method 1: Press the power key about 2 seconds; PWR LED will fast flash and then turn off, it indicates that ENDURO PLUS CDMA is turned off. The time of power off is depended on the quality of network. The maximum time of power off is 90 seconds. It is only valid to turn off when using internal battery. Please note the end-user can not power off ENDURO PLUS CDMA when the power key is disabled by protocol.
- ◆ Method 2: If using external battery, device will power turn-off when external battery disconnect.

 For More Information: Please contact TrackingTheWorld, 1633 Bayshore Highway, Suite 390, Burlingame, CA. 94010, USA

 Phone: +1.650.692.8100 − Email: info@trackingtheworld.com − Website: www.trackingtheworld.com

Copyright © TrackingTheWorld. All rights reserved. Information in this publication supersedes that in all previously published material. Specification and price change privileges reserved. All trade names referenced are the service marks, trademarks, or registered trademarks of their respective companies.

TTW-EnduroPlusCDMA-UM001 - 11 -

4. Troubleshooting and Safety info

4.1. Troubleshooting

Trouble	Possible Reason	Solution
After ENDURO PLUS CDMA	The signal is too weak; ENDURO	Please move ENDURO PLUS CDMA
is turned on, the CDMA-1X	PLUS CDMA can't register to the	into place with good CDMA-1X
LED flashes quickly always.	network.	coverage.
Messages can't be reported	User ID or User Pw is wrong.	Ask the network operator for the
to the backend server by	Some User ID or User PW	right User ID and User Password.
CDMA.	cannot visit the internet	
	directly.	
	The IP address or port of the	Make sure the IP address for the
	backend server is wrong.	backend server is an identified
		address in the internet.
Unable to power off	The function of power key was	Enable the function of power key by
ENDURO PLUS CDMA.	disabled by AT+GTFKS.	AT+GTFKS.
	Unable to power off ENDURO	Disconnect charger or external
	PLUS CDMA if charger	battery, and try again.
	connected or using external	
No manage from HADT	battery.	Damana the MiniTICD cells and
No response from UART	ENDURO PLUS CDMA is in sleep	Remove the MiniUSB cable, and
when configure ENDURO	mode.	plug it in again. After this operation, ENDURO PLUS CDMA will exit from
PLUS CDMA through UART		
		sleep mode for 10 seconds.
		Re-try ENDURO PLUS CDMA manage
		tool again, it will try to wake up
		device.
ENDURO PLUS CDMA can't	The GPS signal is weak.	Please move ENDURO PLUS CDMA to
get successful GPS fixing.	The Granghan is weak.	a place with open sky.
Bee saccessial of 5 lixing.		It is better to let the top surface face
		to sky. (The same surface with
1		indication LED)
	<u> </u>	mulcation LLD)

4.2. Safety info

- Please do not disassemble the device by yourself.
- Please do not put the device on the overheating or too humid place, avoid exposure to direct sunlight. Too high temperature will damage the device or even cause the battery explosion.
- Please do not use ENDURO PLUS CDMA on the airplane or near medical equipment.

For More Information: Please contact TrackingTheWorld, 1633 Bayshore Highway, Suite 390, Burlingame, CA. 94010, USA Phone: +1.650.692.8100 – Email: info@trackingtheworld.com – Website: www.trackingtheworld.com

Copyright © TrackingTheWorld. All rights reserved. Information in this publication supersedes that in all previously published material. Specification and price change privileges reserved. All trade names referenced are the service marks, trademarks, or registered trademarks of their respective companies.

TTW-EnduroPlusCDMA-UM001 - 12 -