



TrackingTheWorld
GPS Tracking Solutions



TrackingTheWorld.com

Enduro Plus

**Multi-purpose
Tracking Device**

USER MANUAL



Document Title	Enduro Plus User manual
Version	1.01
Date	2013-06-25
Status	Release
Document Control ID	TTW-EnduroPlus-UM001

General Notes

TrackingTheWorld offers this information as a service to its customers, to support application and engineering efforts that use the products designed by TrackingTheWorld. The information provided is based upon requirements specifically provided to TrackingTheWorld by the customers. TrackingTheWorld has not undertaken any independent search for additional relevant information, including any information that may be in the customer's possession. Furthermore, system validation of this product designed by TrackingTheWorld within a larger electronic system remains the responsibility of the customer or the customer's system integrator. All specifications supplied herein are subject to change.

Copyright

This document contains proprietary technical information which is the property of TrackingTheWorld, copying of this document and giving it to others and the using or communication of the contents thereof, are forbidden without express authority. Offenders are liable to the payment of damages. All rights reserved in the event of grant of a patent or the registration of a utility model or design. All specification supplied herein are subject to change without notice at any time.

Copyright © TrackingTheWorld 2016

For More Information: Please contact TrackingTheWorld, 1633 Bayshore Highway, Suite 390, Burlingame, CA. 94010, USA
Phone: +1.650.692.8100 – Email: info@trackingtheworld.com – Website: www.trackingtheworld.com

Copyright © TrackingTheWorld. All rights reserved. Information in this publication supersedes that in all previously published material. Specification and price change privileges reserved. All trade names referenced are the service marks, trademarks, or registered trademarks of their respective companies.

Contents

Contents.....	3
0. Revision history.....	4
1. Introduction	5
2. Product Overview	6
2.1. Appearance.....	6
2.2. Buttons/Mini USB Interface Description.....	6
2.3. LEDs Description.....	7
2.4. External Power Interface.....	7
2.4.1. External DC Charger Interface.....	7
2.4.2. External Battery Interface.....	8
2.5. Ignition Detection.....	8
2.6. External Input Interface.....	9
3. Getting Started.....	10
3.1. Parts List	10
3.2. Battery Charging.....	11
3.3. ENDURO PLUS External Cable Interface	11
3.4. Install SIM Card.....	12
3.5. Turn on/Turn off.....	12
4. Troubleshooting and Safety info.....	13
4.1. Troubleshooting	13
4.2. Safety info.....	14

For More Information: Please contact TrackingTheWorld, 1633 Bayshore Highway, Suite 390, Burlingame, CA. 94010, USA
Phone: +1.650.692.8100 – Email: info@trackingtheworld.com – Website: www.trackingtheworld.com

Copyright © TrackingTheWorld. All rights reserved. Information in this publication supersedes that in all previously published material. Specification and price change privileges reserved. All trade names referenced are the service marks, trademarks, or registered trademarks of their respective companies.

0. Revision history

Revision	Date	Author	Description of change
1.00	2013-04-18	Tony PEI	Initial
1.01	2013-06-25	Tony PEI	Add the FCC warnings in Introduction

For More Information: Please contact TrackingTheWorld, 1633 Bayshore Highway, Suite 390, Burlingame, CA. 94010, USA
Phone: +1.650.692.8100 – Email: info@trackingtheworld.com – Website: www.trackingtheworld.com

Copyright © TrackingTheWorld. All rights reserved. Information in this publication supersedes that in all previously published material. Specification and price change privileges reserved. All trade names referenced are the service marks, trademarks, or registered trademarks of their respective companies.

1. Introduction

ENDURO PLUS is a powerful GPS Tracker designed for asset, vehicle, and pet tracking. With superior receive sensitivity, fast TTFF (Time to First Fix) and Quad band GSM frequencies 850/900/1800/1900, its location can be continuously monitored or periodically reported to a backend server or other device. Based on the embedded @Track protocol, the ENDURO PLUS can communicate with the backend server through the GPRS/GSM network (or SMS) to report emergency alerts, Geo-Fence boundary crossings, low battery and scheduled GPS positions along with several other advanced reporting features. System integrators can easily setup their custom tracking platforms to communicate with the ENDURO PLUS based on the @Track protocol.

This device complies with Part 15 of the FCC Rules. Its operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Note: This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

For More Information: Please contact TrackingTheWorld, 1633 Bayshore Highway, Suite 390, Burlingame, CA. 94010, USA
Phone: +1.650.692.8100 – Email: info@trackingtheworld.com – Website: www.trackingtheworld.com

Copyright © TrackingTheWorld. All rights reserved. Information in this publication supersedes that in all previously published material. Specification and price change privileges reserved. All trade names referenced are the service marks, trademarks, or registered trademarks of their respective companies.

2. Product Overview

2.1. Appearance



2.2. Buttons/Mini USB Interface Description

Button /Mini USB Interface Description	
Power Key	<ul style="list-style-type: none"> ● Turn on ENDURO PLUS ● Turn off ENDURO PLUS when without charging. (If power key is enabled)
Function Key	<ul style="list-style-type: none"> ● Geo-Fence mode Long press the key to enable/disable Geo-Fence ID0 ● Geo-Fence in current position mode Long press the key to enable/disable Geo-Fence ID0. If enable Geo-Fence ID0, using the current position as the centre of Geo-Fence 0. ● SOS mode (default) Long press the key to active SOS alarm
Mini USB interface	<ul style="list-style-type: none"> ● Connect a 5V DC adapter can power ENDURO PLUS and charge the internal battery ● Connect a 3.7V Li-ion or Li-Polymer battery can power ENDURO PLUS ● Backend server developer or administrator can use the Data_Cable_M to configure ENDURO PLUS

For More Information: Please contact TrackingTheWorld, 1633 Bayshore Highway, Suite 390, Burlingame, CA. 94010, USA
 Phone: +1.650.692.8100 – Email: info@trackingtheworld.com – Website: www.trackingtheworld.com

Copyright © TrackingTheWorld. All rights reserved. Information in this publication supersedes that in all previously published material. Specification and price change privileges reserved. All trade names referenced are the service marks, trademarks, or registered trademarks of their respective companies.

2.3. LEDs Description

There are three LEDs in ENDURO PLUS, the description as following.

LED	Event	State
GSM LED	Searching network	Fast flash
	Network has been registered	Slow flash
	Power off	Dark
	SIM-PIN Locked	Solid
	Receives a valid protocol command	Turn on for 3 seconds
	<LED on> is 2	Dark
GPS LED	GPS has fixed	Solid
	GPS is in fixing	Fast flash
	GPS is on and GPS data wrong	Slow flash
	GPS is off	Dark
	If <LED on> is 0, 150 seconds later after powers on.	Dark
	<LED on> is 2	Dark
Power LED	Power on and normal	Dark
	Charger inserted and charging completed	Solid
	Charger inserted and charging	Fast flash
	Power key was pressed and prepare to power off	Fast flash
	Abnormal	Fast flash
	Power low alert	Slow flash
	Power off or turn off the power light by command	Dark
	<LED on> is 2	Dark


2.4. External Power Interface

2.4.1. External DC Charger Interface

The Pin2 on Mini-USB connector are used for charging and named as VCHG pin, It can be connected to a 5V DC power supply to power ENDURO PLUS and charge the internal battery.


For More Information: Please contact TrackingTheWorld, 1633 Bayshore Highway, Suite 390, Burlingame, CA. 94010, USA
Phone: +1.650.692.8100 – Email: info@trackingtheworld.com – Website: www.trackingtheworld.com

Copyright © TrackingTheWorld. All rights reserved. Information in this publication supersedes that in all previously published material. Specification and price change privileges reserved. All trade names referenced are the service marks, trademarks, or registered trademarks of their respective companies.

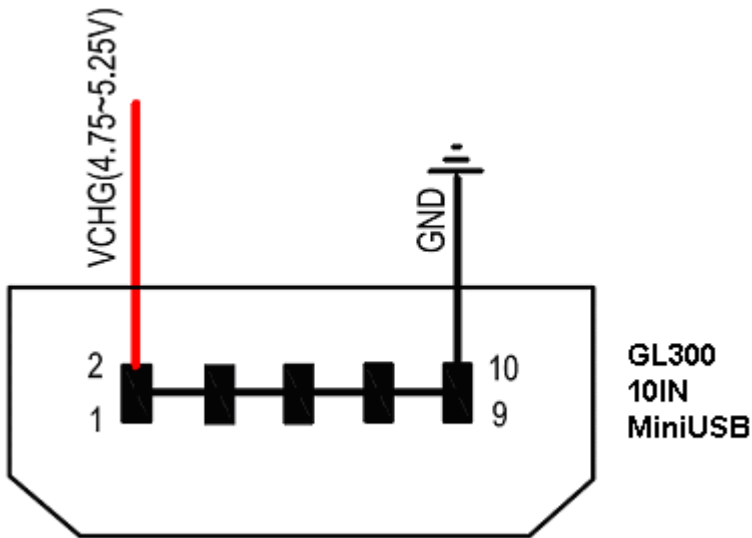

2.4.2. External Battery Interface

The Pin 8 on Mini-USB connector is for external battery and named as EXTBAT pin. It can be connected to 3.7V Li-ion or Li-Polymer battery to power ENDURO PLUS.

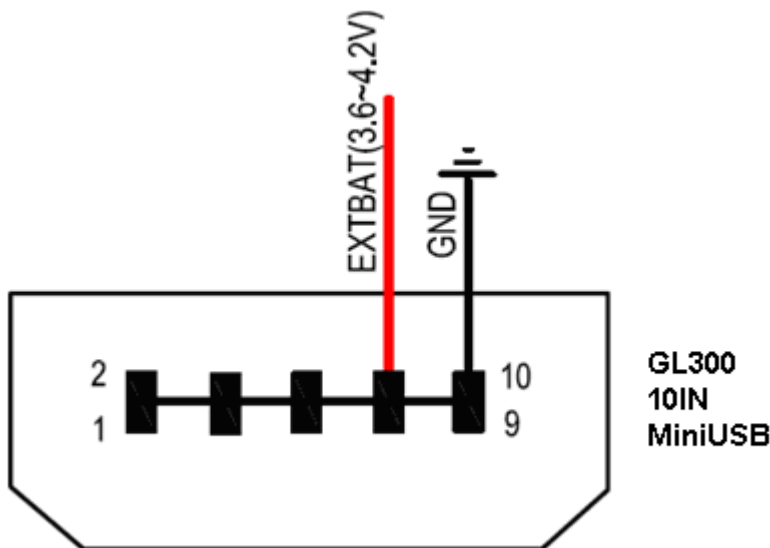


2.5. Ignition Detection

The Pin 7 on Mini-USB connector is for ignition detection when ENDURO PLUS is used in vehicle tracking application. It is named as IGN_IND pin.

For More Information: Please contact TrackingTheWorld, 1633 Bayshore Highway, Suite 390, Burlingame, CA. 94010, USA
 Phone: +1.650.692.8100 – Email: info@trackingtheworld.com – Website: www.trackingtheworld.com

Copyright © TrackingTheWorld. All rights reserved. Information in this publication supersedes that in all previously published material. Specification and price change privileges reserved. All trade names referenced are the service marks, trademarks, or registered trademarks of their respective companies.

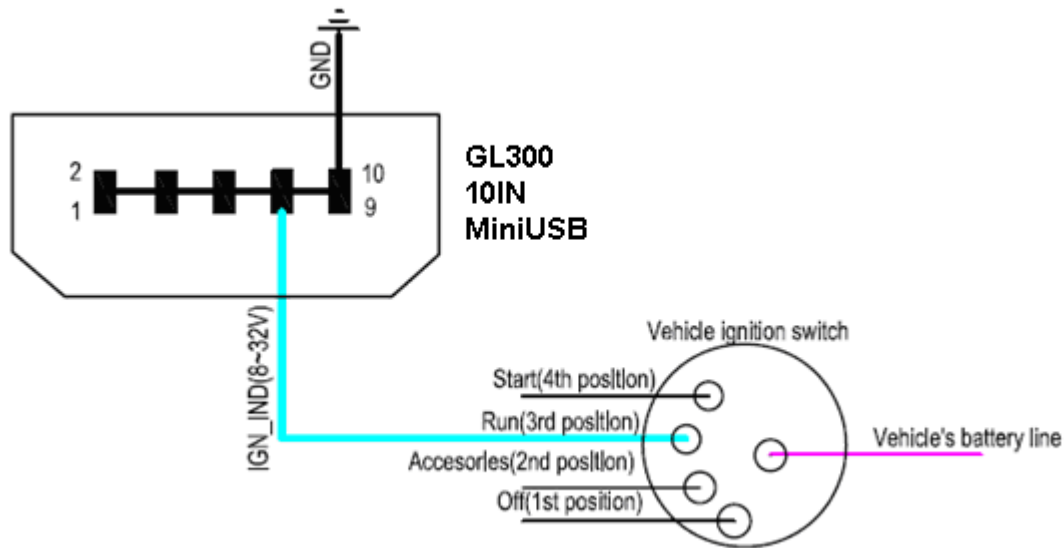

Another easy way is to connect PIN7 to a power output in the fuse box of the vehicle which is only enabled after the vehicle is ignition on. For example: the power output for radio FM.

2.6. External Input Interface

The Pin 5 on Mini-USB connector is a negative trigger input in newer hardware version. It is named as NSW pin.


For negative trigger input the electrical conditions are:

Logical State	Electrical State
Active	0V to 0.8V
Inactive	1.7V to 32V or Open

An input example is shown as following figures:

For More Information: Please contact TrackingTheWorld, 1633 Bayshore Highway, Suite 390, Burlingame, CA. 94010, USA
 Phone: +1.650.692.8100 – Email: info@trackingtheworld.com – Website: www.trackingtheworld.com

Copyright © TrackingTheWorld. All rights reserved. Information in this publication supersedes that in all previously published material. Specification and price change privileges reserved. All trade names referenced are the service marks, trademarks, or registered trademarks of their respective companies.

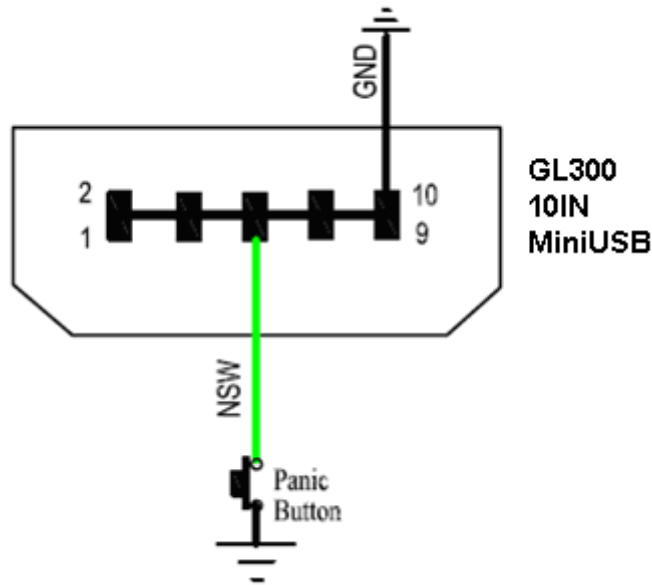

Example of NSW pin connect to a panic button


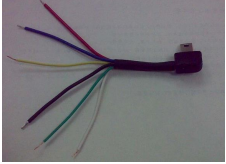
3. Getting Started

3.1. Parts List

Name	Picture	Remark
ENDURO PLUS Locater		The GSM/GPRS/GPS locator.
AC-DC Power Adapter (Standard accessory)		It is used to charge the internal battery of ENDURO PLUS.

For More Information: Please contact TrackingTheWorld, 1633 Bayshore Highway, Suite 390, Burlingame, CA. 94010, USA
 Phone: +1.650.692.8100 – Email: info@trackingtheworld.com – Website: www.trackingtheworld.com

Copyright © TrackingTheWorld. All rights reserved. Information in this publication supersedes that in all previously published material. Specification and price change privileges reserved. All trade names referenced are the service marks, trademarks, or registered trademarks of their respective companies.

<p>ENDURO PLUS Data Cable (Optional accessory)</p>		<p>It is the USB data cable which can be used for firmware upgrading and configuration.</p>
<p>ENDURO PLUS External Cable (Optional accessory)</p>		<p>It is the extend cable which include the charger interface and external battery interface on ENDURO PLUS. It also includes the ignition detection interface on the ENDURO PLUS.</p>


3.2. Battery Charging

- Please connect AC-DC power adapter with ENDURO PLUS.
- Insert the AC-DC power adapter into the power socket.
- During charging, the PWR LED is flashing fast. When the battery is full charged, the PWR LED will be Ever-light.
- You can also charge the battery by USB cable which connects ENDURO PLUS with the PC.
- Charging time is about 5 hours.

Note: Before the first time using ENDURO PLUS, please full charge the battery.

3.3. ENDURO PLUS External Cable Interface

- ENDURO PLUS External Cable is a cable with a Mini USB connector and six wires which include the external power interface, ignition detect and input interface for ENDURO PLUS. Please find the detail description in following table.

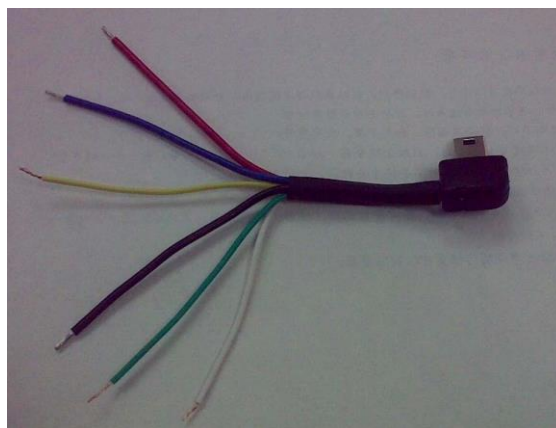


For More Information: Please contact TrackingTheWorld, 1633 Bayshore Highway, Suite 390, Burlingame, CA. 94010, USA
Phone: +1.650.692.8100 – Email: info@trackingtheworld.com – Website: www.trackingtheworld.com

Copyright © TrackingTheWorld. All rights reserved. Information in this publication supersedes that in all previously published material. Specification and price change privileges reserved. All trade names referenced are the service marks, trademarks, or registered trademarks of their respective companies.

Color	Name	Remark
RED	External DC IN (5V)	Please refer to 2.4.1 for detail
Black	Ground	Please refer to 2.4.1 for detail
Blue	External Battery IN (DC 3.4V to 4.2V)	Please refer to 2.4.2 for detail
White	Ignition Detect	Please refer to 2.5 for detail
Green	NSW (negative trigger input)	Please refer to 2.6 for detail
Yellow	OUT(negative trigger output)	Please refer to 2.6 for detail

3.4. Install SIM Card

- First, open the cover of SIM card..
- Then insert the SIM card into the slot of SIM card according to the direction shown.
- Finally, cover the slot.

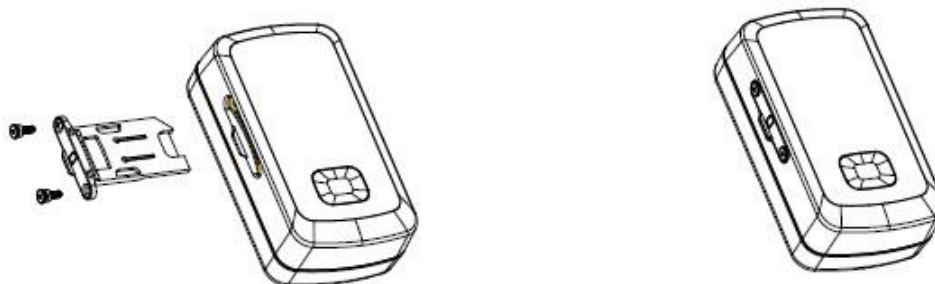

3.5. Turn on/Turn off

- Turn on:
 - ◆ Method 1: Press the Power key at least 3 seconds and release it to turn on ENDURO PLUS. At the same time, PWR LED will light on.
 - ◆ Method 2: Connect device to charger or external battery, and it will turn on automatically, PWR LED will light on.
- Turn off:
 - ◆ Method 1: Press the power key about 2 seconds; PWR LED will fast flash and then turn off, it indicates that ENDURO PLUS is turned off. The time of power off is depended on the quality of network. The maximum time of power off is 90 seconds. It is only valid to turn off when using internal battery. Please note the end-user cannot power off ENDURO PLUS when the power key is disabled by protocol.
 - ◆ Method 2: If using external battery, device will power turn-off when external battery disconnect.

For More Information: Please contact TrackingTheWorld, 1633 Bayshore Highway, Suite 390, Burlingame, CA. 94010, USA
 Phone: +1.650.692.8100 – Email: info@trackingtheworld.com – Website: www.trackingtheworld.com

Copyright © TrackingTheWorld. All rights reserved. Information in this publication supersedes that in all previously published material. Specification and price change privileges reserved. All trade names referenced are the service marks, trademarks, or registered trademarks of their respective companies.

4. Troubleshooting and Safety info

4.1. Troubleshooting

Trouble	Possible Reason	Solution
After ENDURO PLUS is turned on, the GSM LED flashes quickly always.	The SIM card is not inserted.	Please insert the SIM card into ENDURO PLUS.
	The signal is too weak; ENDURO PLUS can't register to the network.	Please move ENDURO PLUS into place with good GSM coverage.
	PIN locked	Using SIM card without SIM-PIN, or unlock SIM-PIN.
Messages can't be reported to the backend server by GPRS.	The SIM card in ENDURO PLUS doesn't support GPRS.	Try a GPRS supported SIM card.
	APN is wrong. Some APN cannot visit the internet directly.	Ask the network operator for the right APN.
	The IP address or port of the backend server is wrong.	Make sure the IP address for the backend server is an identified address in the internet.
Unable to power off ENDURO PLUS.	The function of power key was disabled by AT+GTFKS.	Enable the function of power key by AT+GTFKS.
	Unable to power off ENDURO PLUS if charger connected or using external battery.	Disconnect charger or external battery, and try again.
No response from UART when configure ENDURO PLUS through UART	ENDURO PLUS is in power saving mode.	Remove the Data_Cable_M, and plug it in again. After this operation, ENDURO PLUS will exit from power saving mode for 10 seconds.
		Re-try ENDURO PLUS manager tool again, it will try to wake up device.
ENDURO PLUS can't get successful GPS fixing.	The GPS signal is weak.	Please move ENDURO PLUS to a place with open sky.
		It is better to let the top surface face to sky. (The same surface with indication LED)

For More Information: Please contact TrackingTheWorld, 1633 Bayshore Highway, Suite 390, Burlingame, CA. 94010, USA
Phone: +1.650.692.8100 – Email: info@trackingtheworld.com – Website: www.trackingtheworld.com

Copyright © TrackingTheWorld. All rights reserved. Information in this publication supersedes that in all previously published material. Specification and price change privileges reserved. All trade names referenced are the service marks, trademarks, or registered trademarks of their respective companies.

4.2. Safety info

- Please do not disassemble the device by yourself.
- Please do not put the device on the overheating or too humid place, avoid exposure to direct sunlight. Too high temperature will damage the device or even cause the battery explosion.
- Please do not use ENDURO PLUS on the airplane or near medical equipment.

For More Information: Please contact TrackingTheWorld, 1633 Bayshore Highway, Suite 390, Burlingame, CA. 94010, USA
Phone: +1.650.692.8100 – Email: info@trackingtheworld.com – Website: www.trackingtheworld.com

Copyright © TrackingTheWorld. All rights reserved. Information in this publication supersedes that in all previously published material. Specification and price change privileges reserved. All trade names referenced are the service marks, trademarks, or registered trademarks of their respective companies.